

BT eFrame 1000

Quick Start Guide



Bringing it all together



A full user guide can be downloaded in PDF format
from www.bt.com/help/eframes
Please consider the environment before printing.



This guide can
be recycled.

Welcome

This Quick Start Guide provides all the information you need to get your product up and running. If you need more detailed instructions, a full user guide is available to download in PDF format from **www.bt.com/help/eframes**

We haven't printed a full user guide as we're working to make our products greener, so please consider the environment before printing.

If you cannot find the answer to your problem in the full online user guide, then please call the Helpline on 0808 100 9889*

* Calls made from within the UK mainland network are free.
Mobile and International call costs may vary.

 
BT is a sustainability leader

**{ To find out how we're
making our products
greener visit**


bt.com/betterworld/products 

Your BT eFrame 1000

Top of eFrame

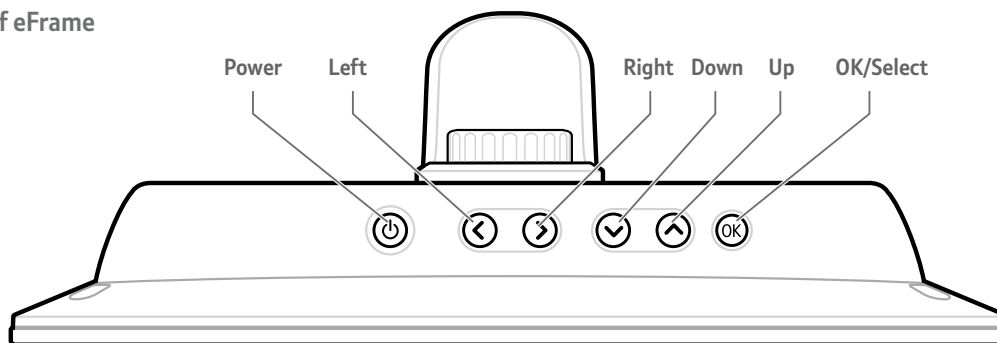

Remote control

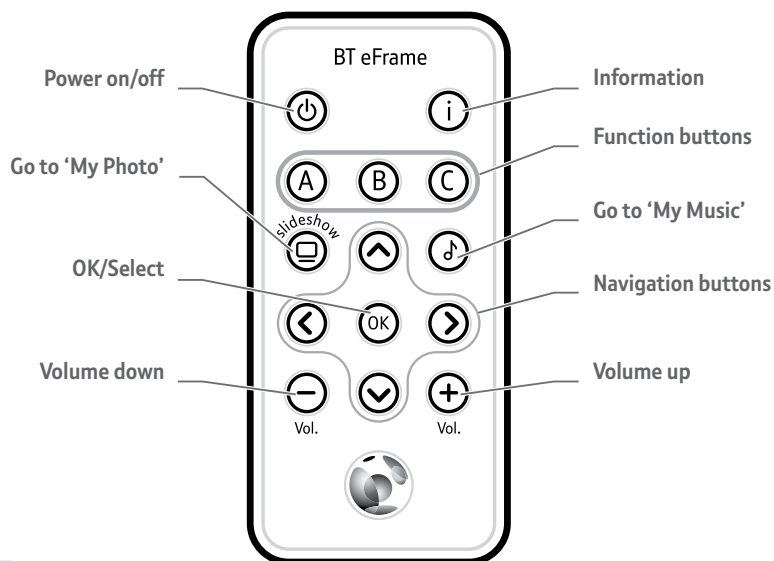 

Using the BT eFrame menu

 
- Use the and buttons to scroll up and down the menu.
- Press to select options.
- Press repeatedly to return to the main menu at any time.

Setting up

Place your BT eFrame close enough to a mains power wall socket so that the cable will reach.

1 Set up the eFrame

- Loosen the knob on the back of the frame and move the stand to adjust the angle of the display. You can position the stand in portrait or landscape format. Make sure you tighten the knob securely after adjustment.

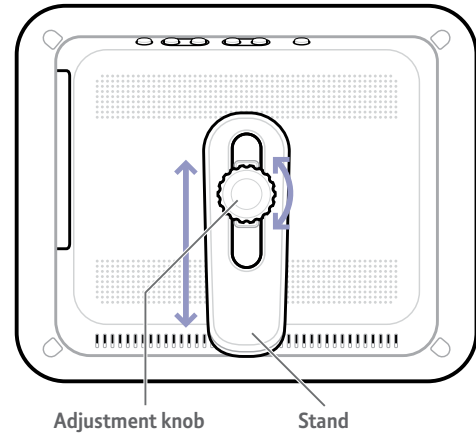

- Plug the mains power adaptor into the side of the BT eFrame, then plug the other end into the wall socket and switch the power on.
Only use the cables provided.

The Welcome screen is displayed (Fig. 1).



Fig. 1

2 Setup Wizard

On the remote, press **OK** to start the Setup Wizard (Fig. 2). Follow the on screen prompts.



Fig. 2

3 Set the time and date

The **Hour** box is highlighted. Press **Up** or **Down** to set the hour (Fig. 3).

Press **Right** to highlight the **Minute** box. Press **Up** or **Down** to set the Minute.

Press **Right** to highlight and set the **Year, Month** and **Day**.

Press **OK** to save.



Fig.3

4 Scan for wireless networks

Press **OK** to search for available wireless connections (Fig. 4)

Alternatively if you already know the details of your wireless connection and prefer to enter manually press the **A** button (please see the online user guide for more details).



Fig.4

5 Join a wireless network

The screen lists all available wireless networks (Fig. 5). The strongest signal is shown at the top. Password protected networks are indicated by a **+** symbol.








- Scroll **Up** or **Down** to highlight the network you want to join and press **OK**.



Fig. 5

If you have selected a password protected network that requires you to enter an encryption key, you will be prompted to enter that key now (Fig. 6).

If you are using a BT Home Hub, the WEP encryption key is shown on a label on the back. Other wireless routers may also have a similar label, or the WEP key will be the password you used when first setting up your wireless network.

- Press  /  /  /  to select a character and press .
- When you have entered the full code, scroll to **OK** key and press . The display shows **CONNECTING** and some additional information about your IP address.
- You have successfully connected.
Press  to display the main menu (Fig. 7).

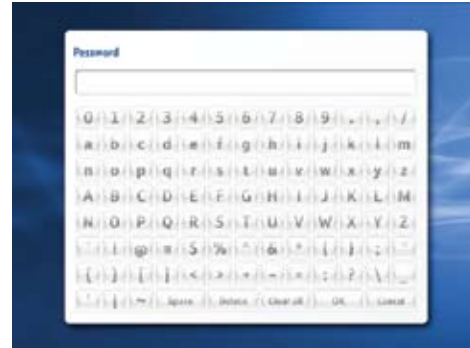 


Fig. 6

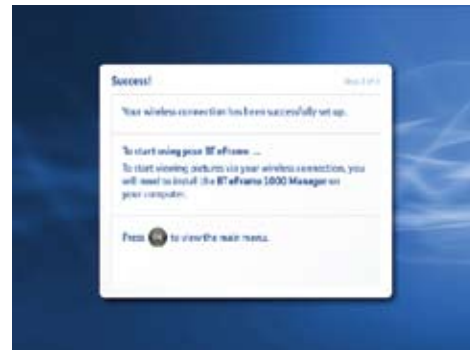 


Fig. 7

6 Install BT eFrame 1000 Manager software

When you install and run the software you may be prompted with the following screen (Fig. 8). If this happens, just click **Unblock**.

- Insert the software CD provided, into your computer. The program will start automatically. The wizard will then prompt you to install the BT eFrame 1000 Manager from the CD-ROM.
- Follow the on-screen prompts to install. When installation is completed, the BT eFrame icon will appear on your desktop.




Fig. 8

Your BT eFrame 1000 is now ready for use.

Using your BT eFrame 1000

Stream photos wirelessly from your PC to your eFrame

From your PC

(Note: ensure that the , is always selected, so that you can stream your photos wirelessly).

1. Click on the BT eFrame 1000 icon on the desktop to open the BT eFrame 1000 Manager software.
2. Click on **Find Photos on my Computers**.
3. Click on **Add** and select the folder that contains the photos that you want to stream (e.g. My Pictures).
4. Press **OK**.
5. Once you have added all of the folders that you want to view, press **Menu**.

From the BT eFrame 1000

1. Click on **Photos** from the main menu.
2. Select **Photos on my computers**.




10 Using your BT eFrame 1000

4. Press **OK**.
5. All of the folders that have been selected in the eFrame 1000 Manager software are shown and when highlighted the folder name is displayed.
6. Scroll to the folder that you want to stream to your eFrame and press **OK**.
7. Thumbnails of the files on the folder are shown and you have the option to copy these to the internal memory or press Slideshow and the images will now be displayed as a slideshow.

Stream photos wirelessly from Flickr™ to your eFrame

From your PC

1. Click on the BT eFrame 1000 icon on the desktop to open the BT eFrame 1000 Manager software.
2. Click on **Manage Flickr™ Albums** (this will open the internet browser on the Flickr™ homepage).
3. Log into your account.
4. Locate the  and drag into the BT eFrame 1000 Manager. (Note: photos must be set to “Public” to allow them to be streamed to your frame).
5. Select the BT eFrame you want to copy to (if you have more than one) by clicking the drop-down box and selecting from the list.
6. Press **Update**. A progress bar will indicate that the link is succesful.
7. Press **Menu** to return to main menu.



From the BT eFrame 1000

1. Click on **Photos** from the main menu.
2. Select **Flickr™**.
3. Press **OK**.
4. All of the folders that have been selected in the eFrame 1000 Manager software are shown and when highlighted the folder name is displayed.
5. Scroll to the folder that you want to stream to your eFrame and press **OK**.
6. Thumbnails of the files on the folder are shown and you have the option to copy these to the internal memory or press slideshow and the images will now be displayed as a slideshow.

Display photos from a memory card

 
Your BT eFrame 1000 is compatible with SD™, MMC™, Memory Stick PRO™ and CompactFlash® memory cards.

1. Insert your memory card into the correct slot at the side of your frame.

Or, connect the USB cable between your camera and the frame and switch the camera on.

The screen shows **LOADING...**

2. Thumbnails of photos are displayed on the left hand side of the screen.
3. Press **Slideshow** to view all of the images.

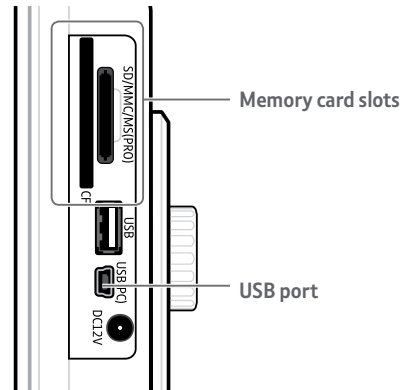

Copy and Display photos on the internal memory

From the PC

1. Click on the BT eFrame 1000 icon on the desktop to open the BT eFrame 1000 Manager software.
2. Click on **Copy Photos**.
3. Locate your photo file(s). You can use the **Browse** button to find the photo folder you want.
4. Select the BT eFrame you want to copy to (if you have more than one) by clicking the drop-down box and selecting from the list.
5. Click **Copy** to copy the photos. A progress bar will appear on both the PC and the eFrame.



From the eFrame 1000

When you have copied the photos to your BT eFrame 1000:

1. Press **Left Arrow** until the main menu is displayed. **Photos** is highlighted. Press **OK**.
2. **Internal Storage** is highlighted. Press **OK**.
3. Scroll **Up** or **Down** to the photo you want and press **OK**. The photo is displayed.

Start slideshow

1. Press **Left Arrow** until the main menu is displayed.
2. Scroll **Down** to **Slideshow** and press **OK**.



Copy and play music on the BT eFrame 1000

From the PC

1. Click on the BT eFrame 1000 icon on the desktop to open the BT eFrame 1000 Manager software.
2. Click on **Copy Music**.
3. Locate your music file(s). You can use the **Browse** button to find the music folder you want.
4. Select the BT eFrame you want to copy to (if you have more than one) by clicking the drop-down box and selecting from the list.
5. Click **Copy** to copy the music. A progress bar will appear on both the PC and the eFrame.



Play music tracks on the BT eFrame 1000

When you have downloaded music to your BT eFrame 1000:

1. Press **⏮** until the main menu is displayed. **Photos** is highlighted. Press **OK**.
2. Scroll **⏮** to **My Music** and press **OK**.
3. Scroll **⏮** or **⏭** to the location of your music tracks and press **OK**.

When a track is playing the screen shows the track details. Press:

A to pause playback, **B** to stop playback, **C** to change the order of playback,
+ or **-** to adjust the playback volume.
 Vol. Vol.

Press **⏮** to return to the main menu.

For a full explanation of features and instructions, please see the main user guide online at www.bt.com/help/eframes

Troubleshooting

Most problems are caused by something very simple and can be fixed with a few simple checks:

- Make sure the mains power adapter is plugged in and switched on.
- Make sure the BT eFrame 1000 has not been switched off at the remote.
If there is no display and the mains adaptor is connected, press (OFF/ON) button on the remote.
- Your BT eFrame 1000 supports the JPEG format loaded from your digital camera.
It may not read all images downloaded from the internet.
- If the memory card does not work, make sure it is a compatible format – SD, MMC, MS Pro or CF – and that you have inserted it all the way into the correct slot on the BT eFrame 1000.
- Pictures with a higher resolution take longer to load.

General information

For information on safety instructions, cleaning, technical information or connecting to a switchboard, please refer to the 'General Information' section in the full user guide at www.bt.com/help/eframes

Guarantee

Your BT eFrame 1000 is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below, the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the BT eFrame 1000, or any component thereof, (other than batteries), which is identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished or repaired product.

The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is required.
- The equipment is returned to BT or its agent as instructed.

This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

This guarantee does not affect your statutory rights.

For further information within and outside the 12 month guarantee, please refer to the full user guide at www.bt.com/help/eframes

Product disposal instructions



The symbol shown here and on the product means that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.

The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimise the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product as per your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased.

Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.

R&TTE Directive & Declaration of Conformity

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive (1999/5/EC). For a copy of the Declaration of Conformity please contact the BT eFrame Helpline on 0808 100 9889* or go to www.bt.com/help/eframes

* Calls made from within the UK mainland network are free. Mobile and International call costs may vary.

BT is a **sustainability leader**

{ To find out how we're
making our products
greener visit

bt.com/betterworld/products 

Offices worldwide

The services described in this publication are subject to availability and may be modified from time to time. Services and equipment are supplied subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of a contract.

© British Telecommunications plc 2008.
Registered Office: 81 Newgate Street, London EC1A 7AJ.
Registered in England No. 1800000.

Designed and produced by The Art & Design Partnership Ltd.

Printed in China / Issue 1 / ADP05-08

